


Epson T676 Cartridge Refill Instruction

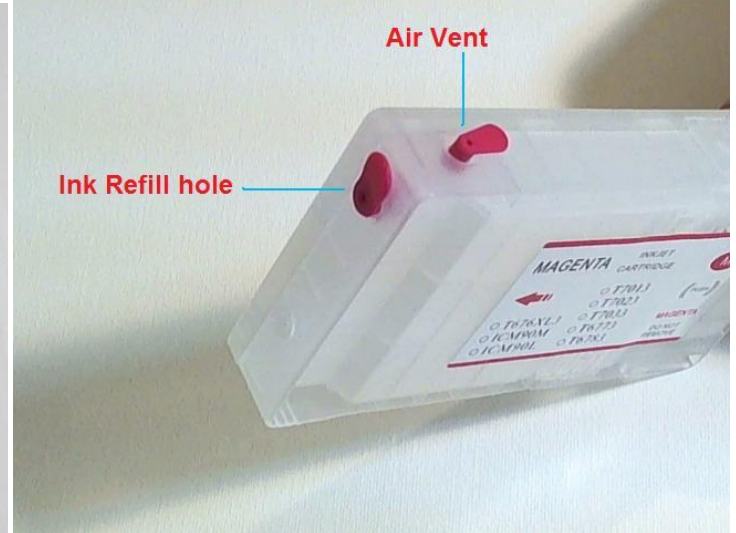

The Refillable cartridge comes with Auto Reset Chip, You just need to take out the cartridge and reinstall it when you see the ink light is on, this process will reset the ink level to full again.

The ink level shows on the printer or computer does NOT reflect the ink level in the cartridge, please check the cartridge ink level by open the printer cover, and refill the cartridge as needed.